










TransTech System Accessories

Standard Adapter kit 200-3100A: TransTech-3 Service Unit

The most common applications are listed below; other applications may apply.

| PART & NUMBER | QTY | DESCRIPTION |
|---|-----|---|
|  <p>060-1000</p> | 1 | 1/4" Male Bump Tube Most Asian Vehicles |
|  <p>060-1100</p> | 1 | 5/16" Male Bump Tube Most Asian Vehicles |
|  <p>060-1200</p> | 1 | 3/8" Male Bump Tube Most Asian Vehicles |
|  <p>060-1300</p> | 1 | 1/4" Open End Hose Most Asian Vehicles |
|  <p>060-1400</p> | 1 | 5/16" Open End Hose Most Asian Vehicles |
|  <p>060-1500</p> | 1 | 3/8" Open End Hose Most Asian Vehicles |
|  <p>060-0450</p> | 2 | Hose Clamp 7/8" I.D. max General Application |

Standard Adapter Kit 200-3100 A (Continued)






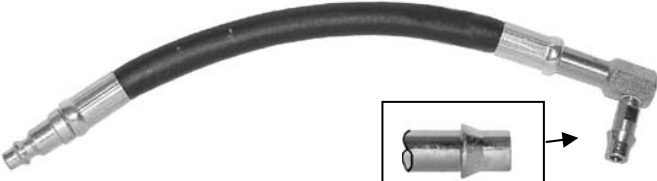
| PART & NUMBER | QTY | DESCRIPTION |
|---|-----|---|
|  <p style="text-align: center;">060-1700</p> | 1 | <p>5/16" Flare, 7/16"-24 Domestic Vehicles Use with 062-0170</p> |
|  <p style="text-align: center;">060-1800</p> | 1 | <p>3/8" Flare, 5/8"-20 Domestic Vehicles Use with 062-0180</p> |
|  <p style="text-align: center;">060-3800</p> | 1 | <p>#5 SAE Flare European Vehicles Use with 061-0605 & 061-0005 (optional)</p> |
|  <p style="text-align: center;">062-0100</p> | 1 | <p>5/16" Male Flare-Deep Ford Vehicles Use with 062-2060 (or 062-0110 in old kits)</p> |
|  <p style="text-align: center;">062-2060</p> | 1 | <p>5/16" Female Flare-Deep Ford Vehicles Use with 062-0100 (Replaces 062-0110)</p> |
|  <p style="text-align: center;">062-0120</p> | 1 | <p>3/8" Male Flare-Deep Ford Vehicles Use with 062-1034 (or 062-0130 in old kits)</p> |
|  <p style="text-align: center;">062-1034</p> | 1 | <p>3/8" Female Flare-Deep Ford Vehicles Use with 062-0120 (Replaces 062-0130)</p> |

Standard Adapter Kit 200-3100A (Continued)







| PART & NUMBER | QTY | DESCRIPTION |
|---|-----|---|
|  <p>080-0594</p> | 1 | <p>MQD X 3/8" FPT General Application Use with 080-0595</p> |
|  <p>080-0595</p> | 1 | <p>MQD X 3/8" MPT General Application Use with 080-0594</p> |
|  <p>061-0605</p> | 1 | <p>#5 SAE x #6 SAE Union European Vehicles Use with 062-0140 or 060-3800</p> |
|  <p>062-0170</p> | 1 | <p>5/16" Female Flare x 1/4" MPT General Application Use with 060-1700</p> |
|  <p>062-0180</p> | 1 | <p>3/8" Female Flare x 1/4" MPT General Application Use with 060-1800</p> |

Deluxe Adapter kit 200-3101A: TransTech Service Unit

The most common applications are listed below; other applications may apply.





| PART & NUMBER | QTY | DESCRIPTION |
|---|-----|--|
|  <p>060-4200</p> | 1 | <p>5/16" Male Tube with Locking Quick Connect Dodge / Ford Vehicles Use with 060-1400</p> |
|  <p>060-4300</p> | 1 | <p>3/8" Male Tube with Locking Quick Connect Dodge / Ford Vehicles Use with 060-1500</p> |
|  | 1 | <p>FORD 3/8" 'double bump' 062-4401</p> |
|  <p>061-1550</p> | 1 | <p>1/2" Open End Hose Chrysler V-10 Diesel Use with 062-2040</p> |
|  <p>062-2040</p> | 1 | <p>1/2" Male Tube with Locking Quick Connect Chrysler V-10 Diesel Use with 061-1550</p> |
|  <p>062-2066</p> | 1 | <p>3/8" Male Tube with Locking Quick Connect G.M. 95 & up Vehicles Use with 060-1500 (Replaces 062-2050)</p> |

Deluxe Adapter Kit 200-3101A (Continued)

| PART & NUMBER | QTY | DESCRIPTION |
|--|-----|---|
|  <p>060-2402</p> | 2 | <p>14mm x 1.5 Banjo Euro / Asia Vehicles Use with 060-2740</p> |
|  <p>060-2740</p> | 1 | <p>14mm x 1.5 Banjo Bolt Euro / Asia Vehicles Use with 060-2402</p> |
|  <p>060-2741</p> | 3 | <p>14mm Washer Euro / Asia Vehicles Use with 060-2740</p> |
|  <p>060-2742</p> | 1 | <p>14mm x 1.5 Cap Nut Euro / Asia Vehicles Use with 060-2740</p> |
|  <p>080-0592</p> | 1 | <p>MQD X 1/4" FPT General Application Use with 080-0593</p> |
|  <p>060-2600</p> | 1 | <p>16mm x 1.5 Bubble Flare European Vehicles Use with 060-2300 & 060-2700 (not included or shown)</p> |

Optional Transmission Adaptors





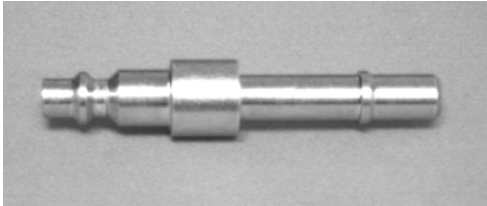
The following adaptors are available for the TRANSTECH III. The adaptors listed are not included with any configured adapter kits and are not sold in sets.

| PART & NO. | APPLICATION |
|---|---|
|  <p data-bbox="435 701 721 764">062-2061 / Male Side (O'Ring P/N: 080-3602)</p> | <p data-bbox="971 554 1442 722">Volvo 850 Application Volvo V-70 All Wheel Drive Male O-Ring Type / Flange Style Counterpart Adaptor: 062-2062 (Note: One O'ring)</p> |
|  <p data-bbox="428 1037 721 1066">062-2062 / Female Side</p> | <p data-bbox="971 835 1442 974">Volvo 850 Application Volvo V-70 All Wheel Drive Female receptacle / Flange Style Counterpart Adaptor: 062-2061</p> |
|  <p data-bbox="435 1323 721 1386">062-2063 / Male Side (O'Ring P/N: 080-2326)</p> | <p data-bbox="948 1171 1468 1310">Volvo 'S' Series Application Male O-Ring Type / Push Lock Style Counterpart Adaptor: 062-2064 (Note: Two O'rings)</p> |
|  <p data-bbox="444 1650 737 1680">062-2064 / Female Side</p> | <p data-bbox="938 1491 1474 1596">Volvo 'S' Series Application Female Receptacle / Push Lock Style Counterpart Adaptor: 062-2063</p> |

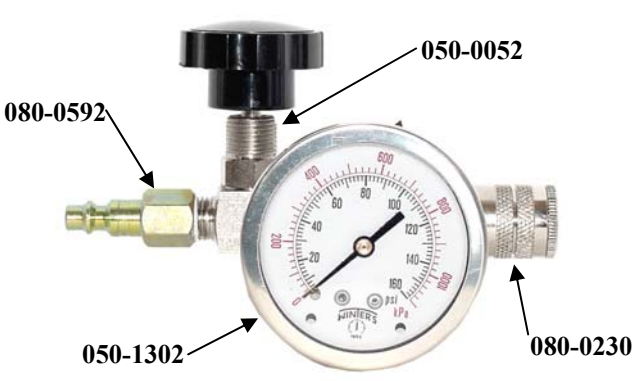



Optional Transmission Adaptors (Continued)

| PART & NO. | APPLICATION |
|---|--|
|  <p>062-2000/ Male Side (O'Ring P/N: 080-3602)</p> | <p>BMW (Jaguar & Mercedes) 12 mm Male O-Ring Type / Flange Style Counterpart Adaptor: 062-2005</p> |
|  <p>080-0593</p> <p>062-2005 / Female Side</p> | <p>BMW (Jaguar & Mercedes) 12mm Female Receptacle / Flange Type Counterpart Adaptor: 062-2000</p> |
|  <p>062-2010 / Male Side (O-Ring P/N: 080-3402)</p> | <p>BMW (Jaguar & Mercedes) 10mm Male O'Ring Type / Flange Style Counterpart Adaptor: 062-2015</p> |
|  <p>080-0593</p> <p>062-2015 / Female Side</p> | <p>BMW (Jaguar & Mercedes) 10mm Female Receptacle / Flange Style Counterpart Adaptor: 062-2010</p> |
|  <p>011-5014</p> | <p>Adapter "sorter" rack for drain tray. (Standard equipment after Jan. 1,2006 build date).</p> |

Optional Transmission Adaptors (Continued)

| PART & NO. | APPLICATION |
|--|---|
|  <div data-bbox="634 344 883 443" style="border: 1px solid black; padding: 2px;">Discontinued version</div>  <div data-bbox="735 548 907 690" style="border: 1px solid black; padding: 2px;">Current version 3/4" hose</div> | <p>ALLISON 1000 DURAMAX Female O-Ring Type / Flange Style Counterpart Adaptor: 062-2069</p> <div data-bbox="1045 625 1365 726" style="border: 1px solid black; padding: 5px; text-align: center;"> 062-2068 / Female (O'Ring P/N: 080-6014) </div> |
|  | <p>ALLISON 1000 DURAMAX Male Receptacle / Flange Type Counterpart Adaptor: 062-2068</p> <div data-bbox="1045 936 1370 1014" style="border: 1px solid black; padding: 5px; text-align: center;"> 062-2069/ Male Side </div> |
|  <div data-bbox="180 1413 531 1556" style="border: 1px solid black; padding: 5px;"> <p>Note: Pull O'Ring from oil filter & install in the adaptor.</p> </div> <div data-bbox="628 1423 807 1486" style="border: 1px solid black; padding: 5px; text-align: center;"> 062-2065 </div> | <p>ALLISON 1000 or SATURN with SPIN-ON TRANSMISSION FILTER 062-2065</p> <p>Note: O'Ring is not included with adaptor. Please remove o'ring from the old filter and install in the adaptor.</p> <p>Note: The center hole is 3/4" ID x 20 thread pitch.</p> |
|  | <p style="text-align: center;">062-2072</p> <p style="text-align: center;">G.M. (CADILLAC CTS)</p> |

Optional Transmission Adaptors (Continued)

| PART & NO. | APPLICATION |
|---|---|
|  | <p>Low Flow Transmission Pressure Adaptor</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;">200-6100</div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;">For “high” flow applications, reverse the male & female couplers</div> |
|  <p style="text-align: center;">062-0140</p> | <p>#6 SAE Flare European Vehicles Use with 061-0605</p> |
|  <p style="text-align: center;">080-0593</p> | <p>MQD X 1/4” MPT General Application Use with 080-0592</p> |
|  | <p style="text-align: center;">200-0062</p> <p>Flush tool canister. Used to put flush chemicals into transmission cooler systems. (no dipstick trans.)</p> |

Optional Transmission Adaptors (Continued)

| | |
|---|---|
|  | <p>FORD F-350 TORQSHIFT 1/2" male deep-flare</p> <p>062-2071</p> |
|  | <p>FORD F-350 TORQSHIFT 1/2" female deep-flare</p> <p>062-2070</p> |
|  | <p>062-4400 'double bump' FORD 1/2 "</p> |
|  | <p>062-2073 MERCEDES BENZ</p> |
|  | <p>062-2074 MERCEDES BENZ</p> |
|  | <p>ALLISON 540 & 634 USE 3 JIC FITTINGS</p> <p>061-0008 061-0010 061-1008</p> |

ORDERING PARTS

**Parts for the unit may be ordered by calling
Customer Service, have your model and serial numbers available:
Call: 800/841-8810, 714/558-4822**